


FUNCTIONS

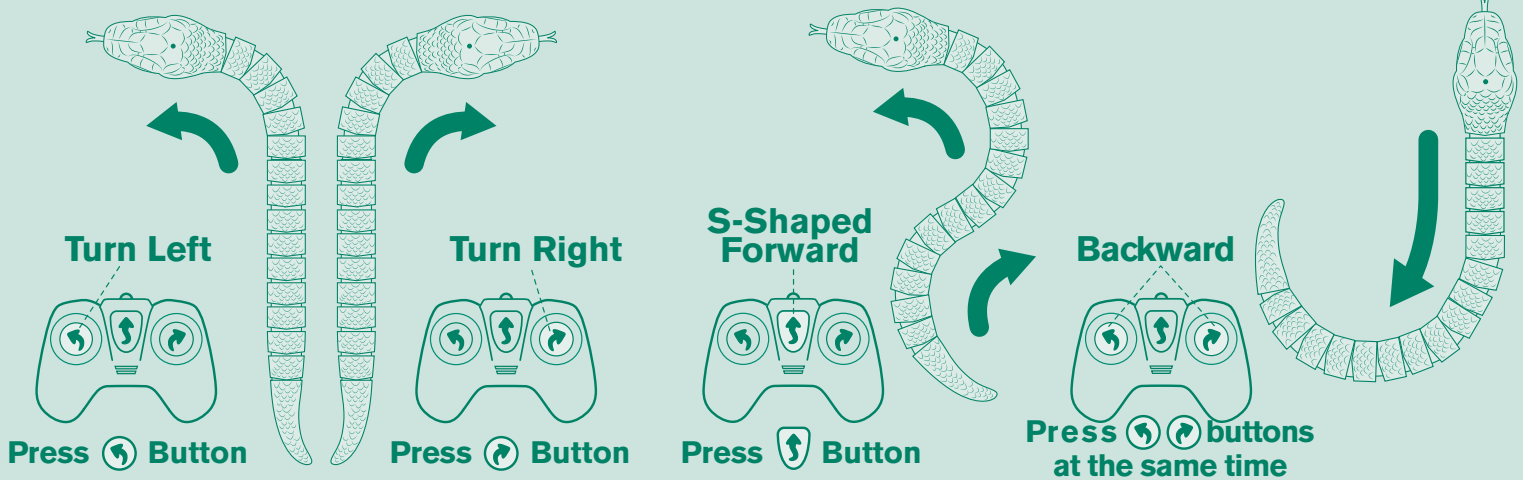


Reassembly instructions in case the pegs of snake disconnect.

If the snake disconnects, see Fig. 1 to reconnect.

Step 1: Insert peg in snake's bottom.

Step 2: Insert peg in snake's top.


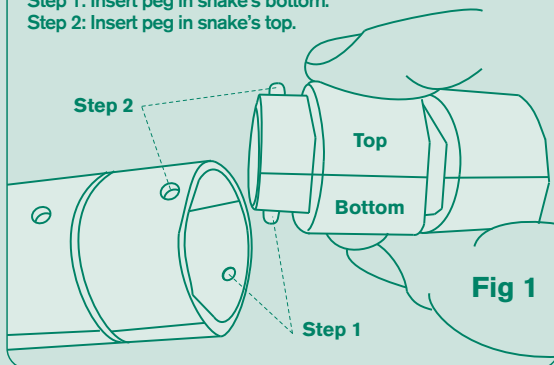


- Press the On/Off button on the bottom of the snake to turn the toy on.
- Keep the remote pointed toward the snake while in use.
- The snake will automatically turn off after 2 minutes when not in use.
- Interference may occur when more than 2 IR snakes are used at the same time.
- Do not use IR snake and IR spider (sold separated) at the same time.
- Use snake only on a flat surface.
- Not suitable for use outdoors or on carpet and sand.
- Keep hair away from motorized wheels to avoid entanglement.
- Excessive dirt and/or water may cause the toy to malfunction.
- For best results, do not use the product in direct sunlight.



REPLACING BATTERIES

Snake

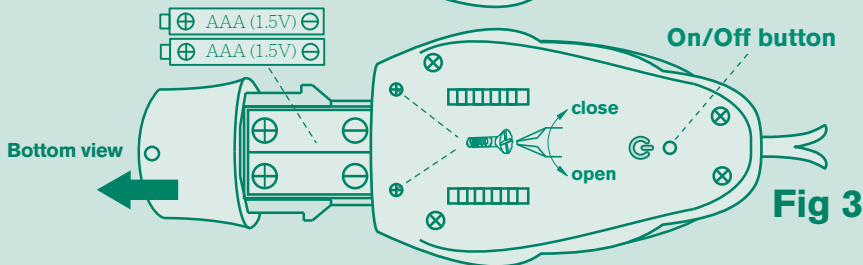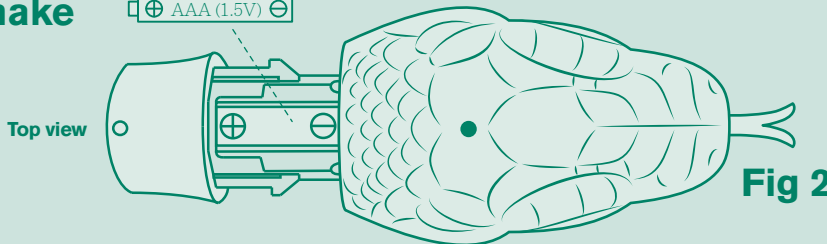


Step 1: Unscrew battery compartment.

Step 2: Pull out snake body to replace 3 AAA (1.5V) batteries. See Fig 2 & Fig 3.

Remote

Power Led

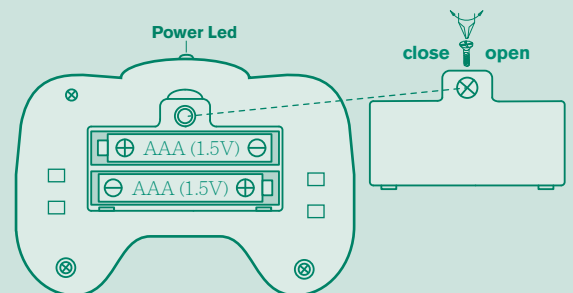

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

SNAKE: 3 x AAA (1.5V) BATTERIES INCLUDED
REMOTE: 2 x AAA (1.5V) BATTERIES INCLUDED

- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable batteries.
- Dead batteries? Check out earth911.com to quickly find the recycling center nearest you.

ATTENTION: When the module's functions lose performance, follow instructions carefully to install new batteries.

Please remove all packaging materials before giving to children.
Use Alkaline batteries for longer play time.